

We appreciate your interest in ensuring your Targus docking station (DOCK182-A1) is configured correctly. Please see the table of contents below:

Table of Contents

[Included Items](#)

[Special considerations](#)

[About the Targus Docking Station](#)

[Setup Guide](#)

[Relevant Guides](#)

Included items:

1 Targus docking station



1 Docking station power adapter




1 Targus docking station interface cable



Considerations

*Connections using the USBA adapter on the connecting cable will not provide power to your computer. Disconnect the adapter to ensure that power is supplied.

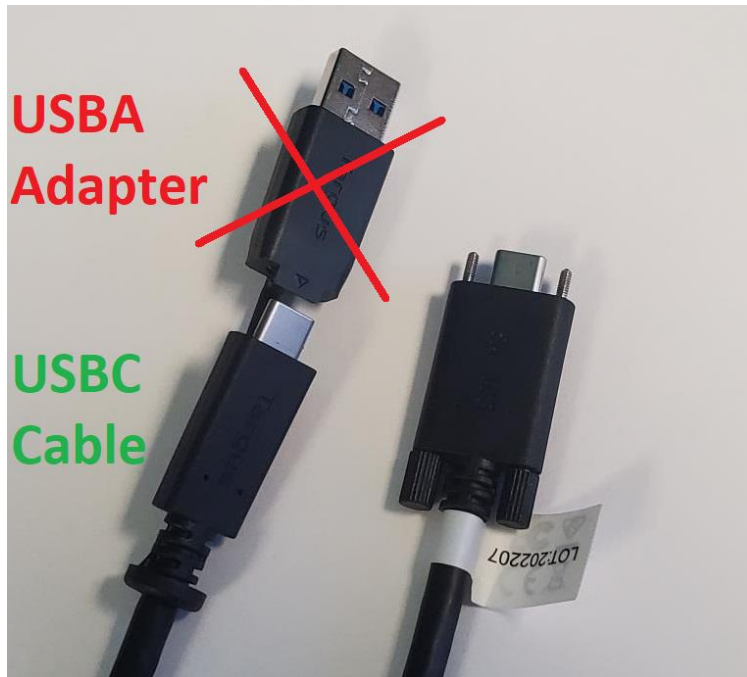

*The Targus docking station only supports up to two monitors. While there are 4 ports available, only one port should be utilized for each video stream.

About the Targus docking station

This docking station supports the following connections:

- (A) - 1 – TRS jack (microphone/headset)
- (B) - 1 – USBC
- (C) - 4 – USBA 3.0
- (D) - 2 – DisplayPort*
- (E) - 2 – HDMI*
- (F) - 1 – RJ45 (Ethernet)
- (G) - 1 – Dock to PC interface connector USBC
- (H) - 1 – 20V DC in (Power in)

(I) - 1 – 19.5V DC out (electrical passthrough)



*While there are 4 video ports (2 DisplayPort | 2 HDMI), only 2 can be used at a time.

Setup Guide

- 1) Unbox and recognize all three components of the Targus docking station.

Images of all three items can be found under [Included Items](#).

- 2) Connect the 125V power adapter to the docking station.
 - a. Connect the 3-prong power cable to the power adapter:
 - b. Connect the circular power cable to the docking station using the “IN DC 20V port”




- 3) Connect your network cable to the docking station. (Does not apply to workstations using Wi-Fi)

- a. Using the RJ45 Ethernet cable (pictured below) connect to port F on the docking station. Be sure to pinch the end of the ethernet cable to prevent damage when unplugging.



Connect your workstation by following the diagram below:

- 1- If your workstation uses an IP phone
- 2- If your workstation does not use an IP phone

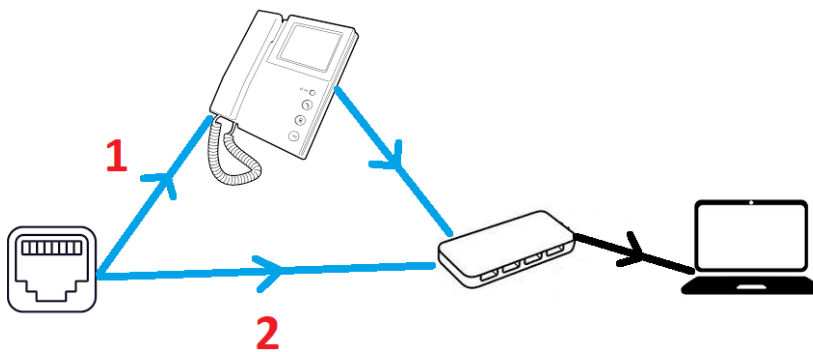

- 4) Connect the Targus docking station to your PC.
 - a. *Ensure that the USBA adapter pictured below is disconnected as power cannot be supplied to laptops unless the USBC cable is used.
 - b. Using the interface cable, connect the docking station and workstation according to the graphics below:



- 5) Connect peripheral devices (mouse, keyboard, headset) to docking station.
- a. *Please do not connect desktop fans or phone chargers to the docking station.
 - b. Utilize the following 5 USB ports to connect your devices:

Rear: 3 USBA | Side: 1 USBA | Front: 1 USBC



- 6) Connect additional monitors to your workstation.
- *Ensure that no more than two monitors are connected via the Targus docking station.
 - *Use only one video port per video stream (pictured below).



Relevant Guides

Please see relevant documentation and guides below:

[HTT Website](#) - HTT (Compass Group)

[Manuel / User Guide](#) - Targus

[Order Equipment through MITS](#) - Dropbox (Technician supported)

[Set up multiple monitors](#) - Microsoft Support

[Demonstrative video](#) - YouTube